

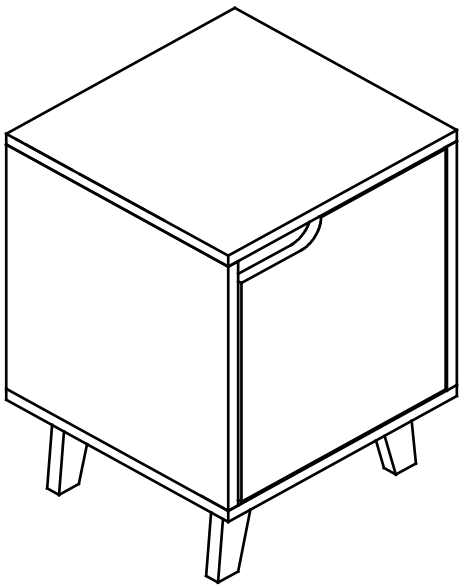
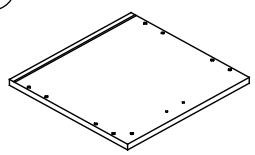
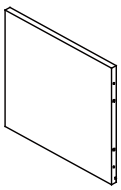
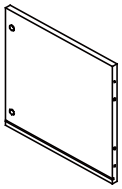
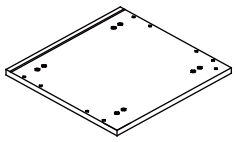
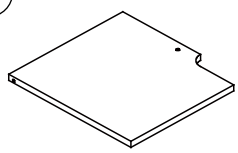









1  1PC	2  1PC	3  1PC	4  1PC
5  4PCS	6  1PC	7  1PC	A  M6x35mm 4PCS
B  M15x10mm 4PCS	C  M4x35mm 12PCS	D  M6x30mm 8PCS	E  M3x14mm 6PCS
F  1PC	G  1PC	H  2PCS	I  M3x10mm 1PC
J  4PCS	K  12PCS	L  4PCS	M  1PC




1

Ax4
Dx8
Ex2
Fx1

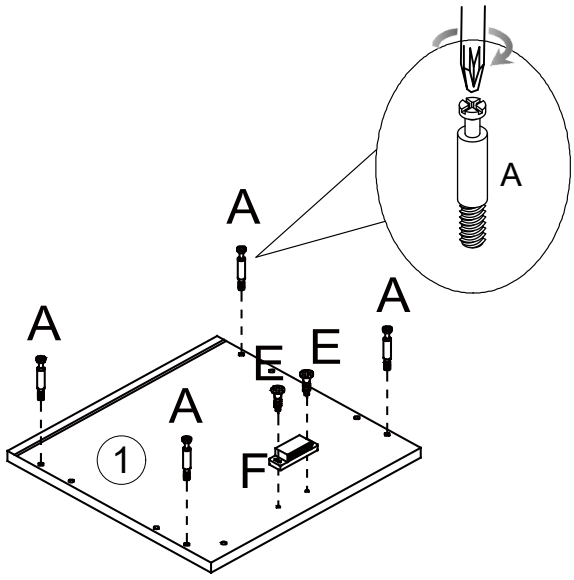


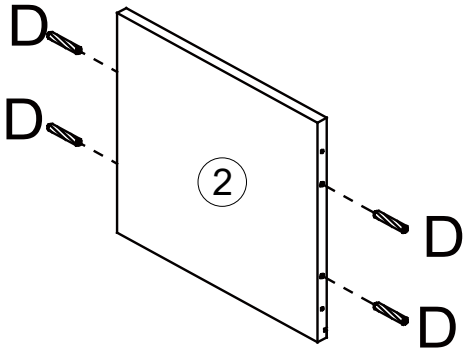

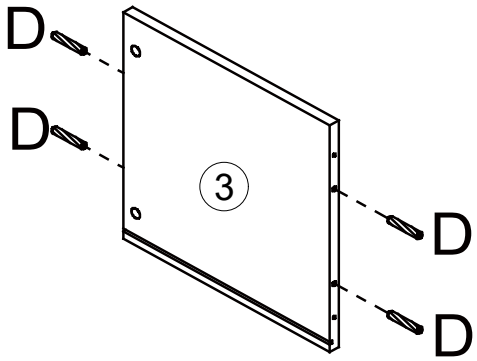


2

Cx8
Kx8

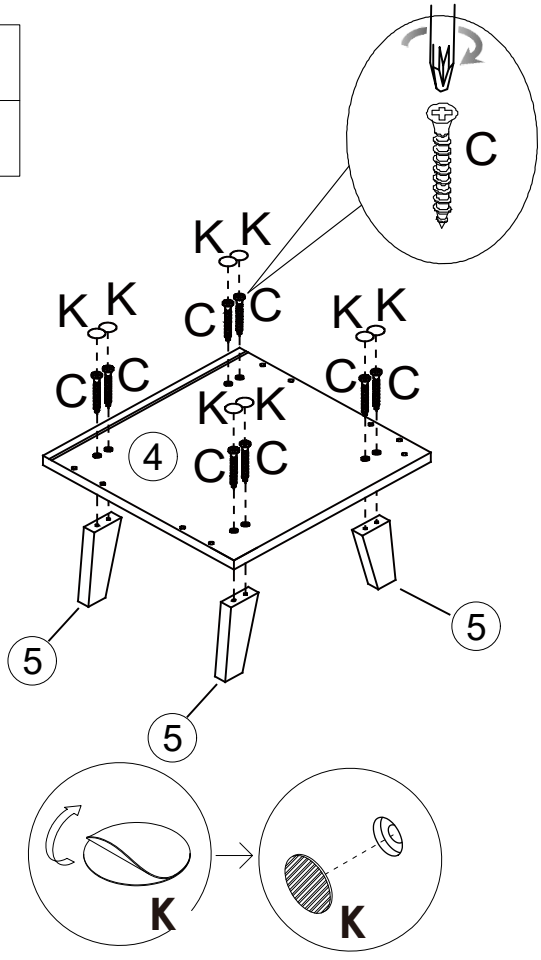

3


Cx4
Lx4

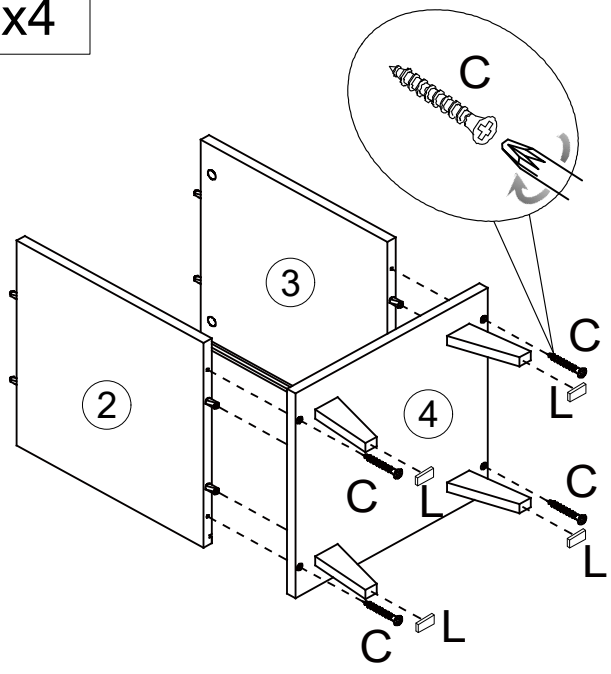




Peel off the film and stick it to the bottom of the cabinet feet.

4

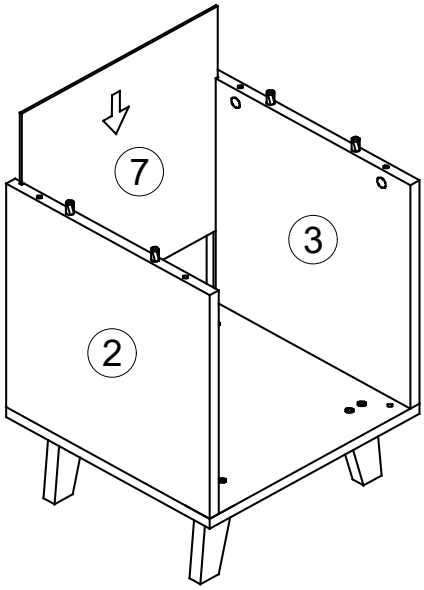


5


Gx1
Hx2
Ix1

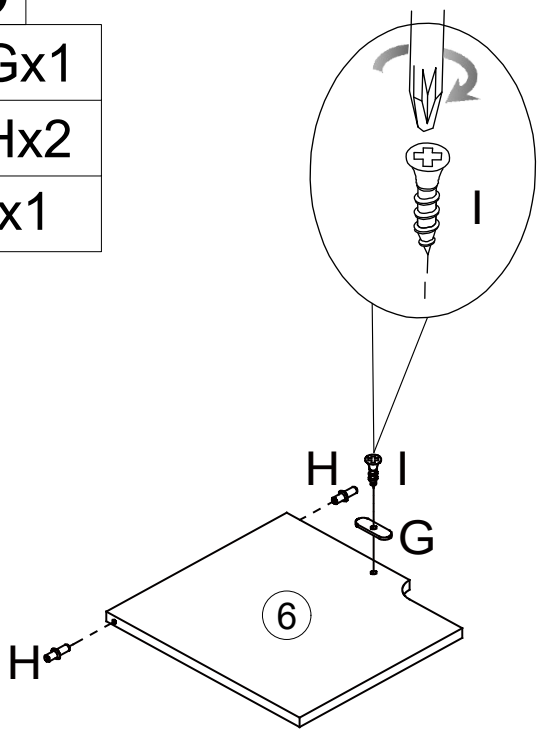


6

Bx4
Kx4

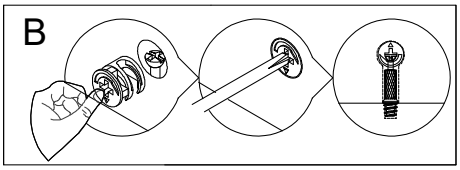

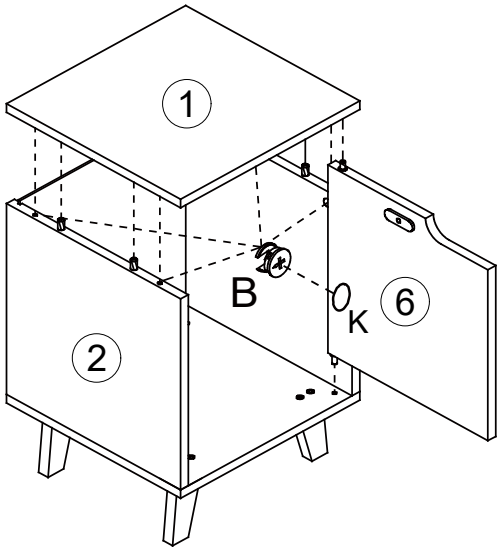

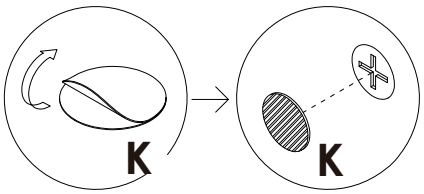

7

Ex4
Jx4

