
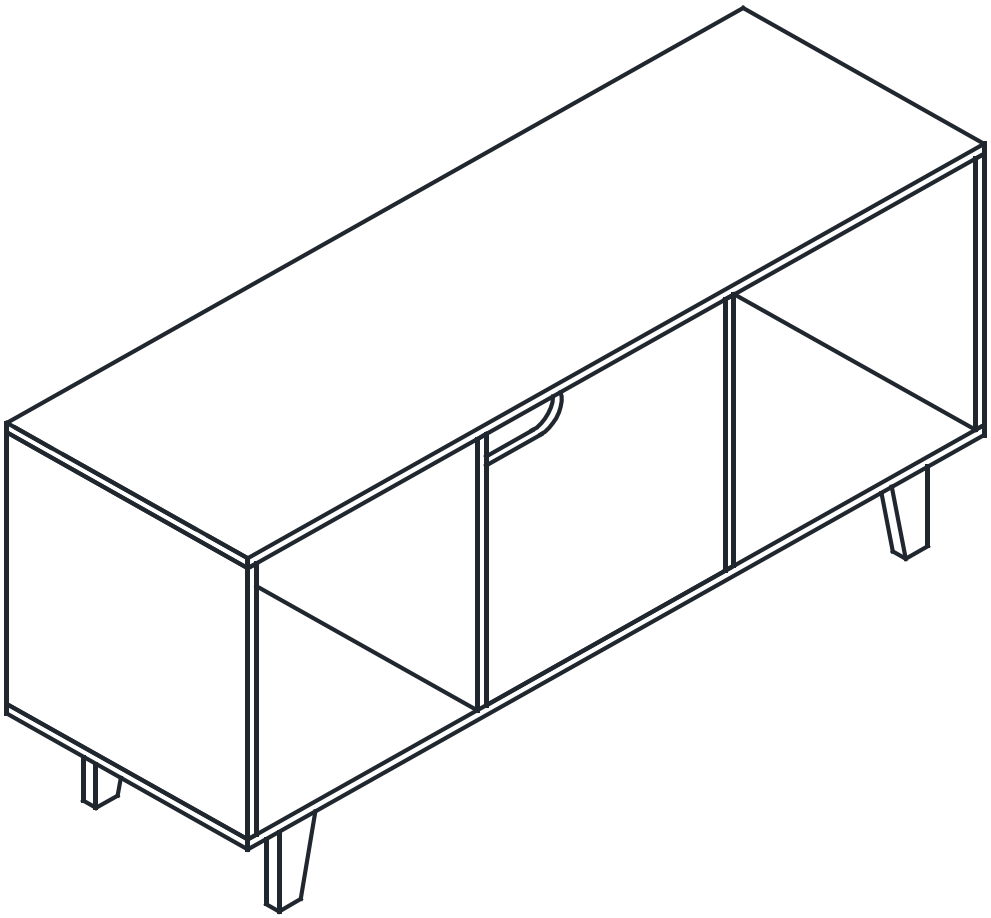
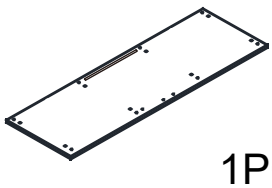


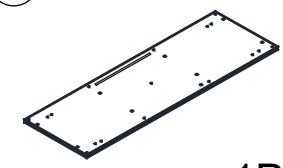












1  1PC	2  1PC	3  1PC	4  1PC
5  4PCS	6  1PC	7  1PC	8  1PC
9  1PC	10  1PC	A  M6x35mm 8PCS	B  M15x10mm 8PCS
C  M4x35mm 17PCS	D  M6x30mm 16PCS	E  M3x14mm 6PCS	F  1PC
G  1PC	H  2PCS	I  M3x10mm 1PC	J  4PCS
K  17PCS	L  1PC	M  4PCS	




1

Ax8


Ex2


Fx1

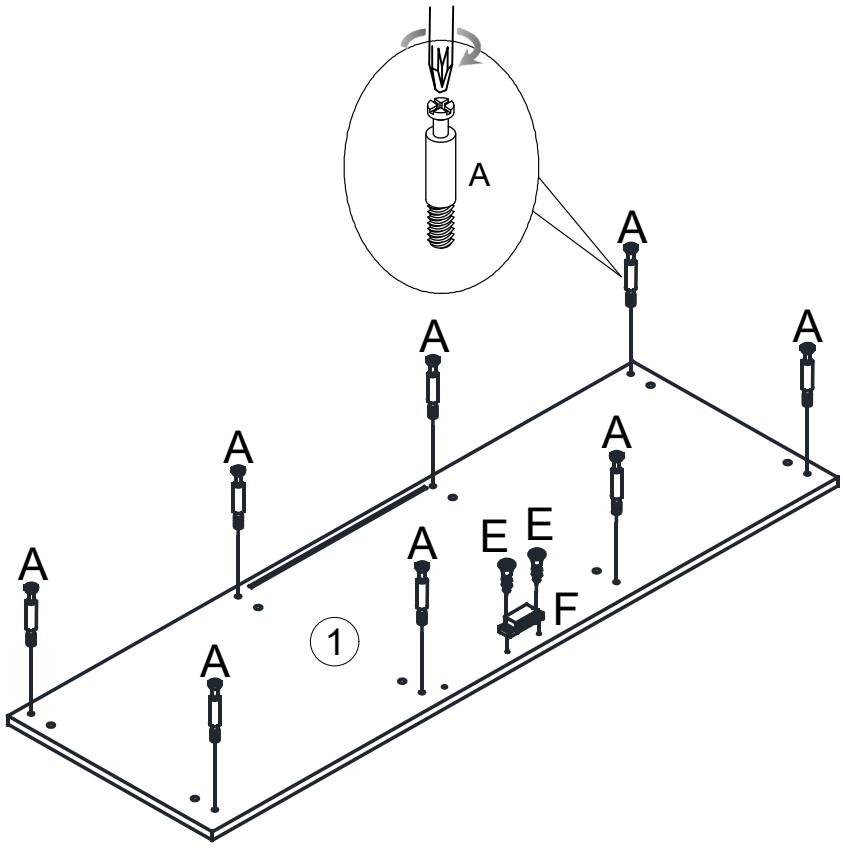



2

Dx16

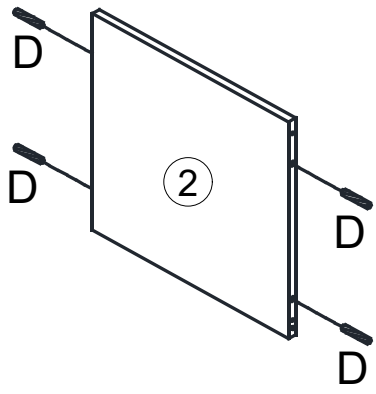

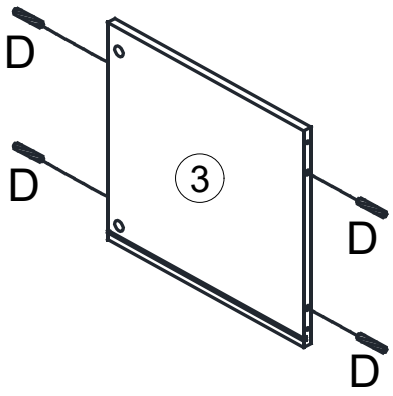

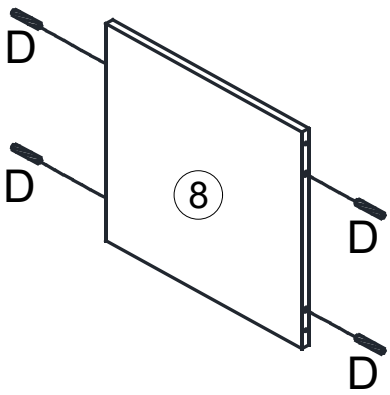


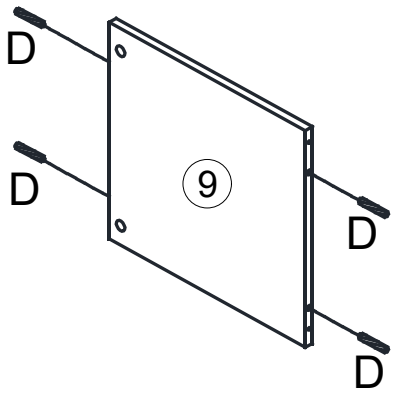

3

Cx9


Kx9

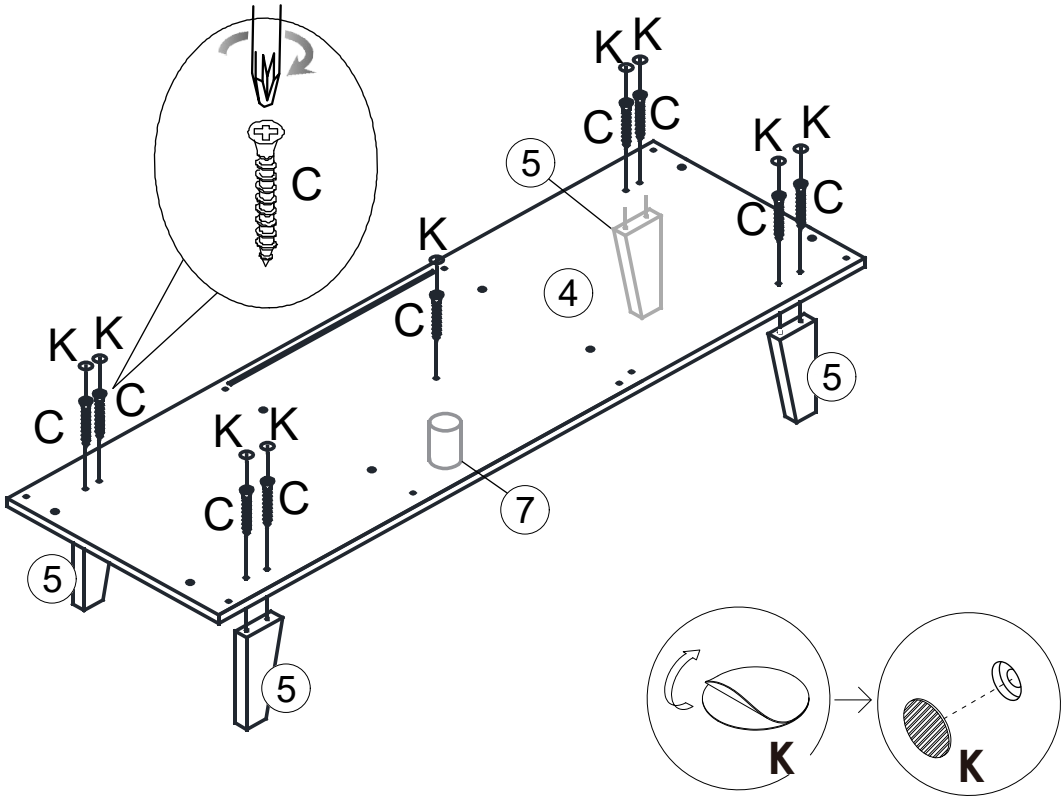

4

Cx8


Mx4

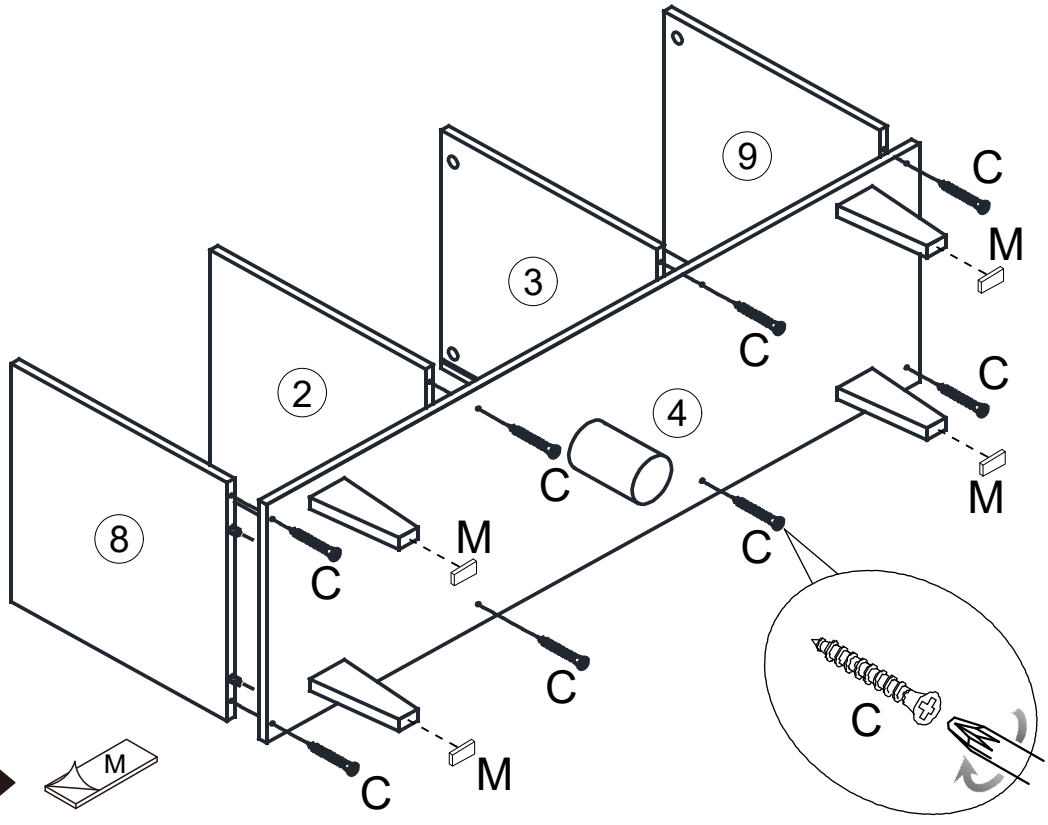




Peel off the film and stick it to the bottom of the cabinet feet.


5

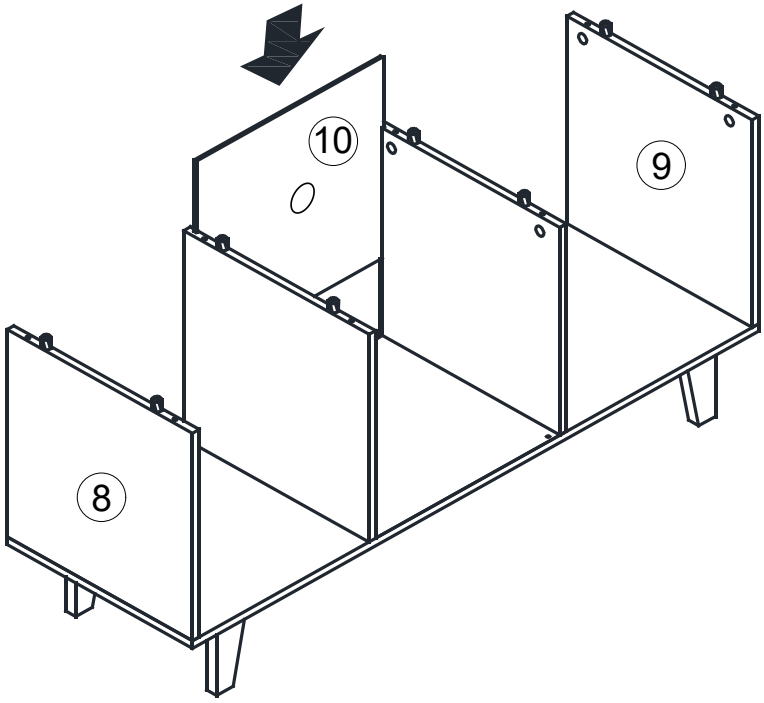



6

Bx8
Gx1
Hx2
Ix1
Kx8

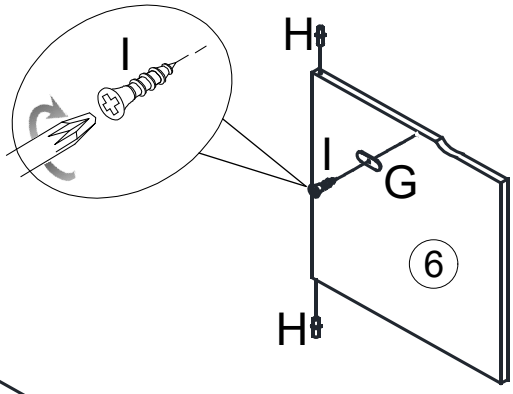

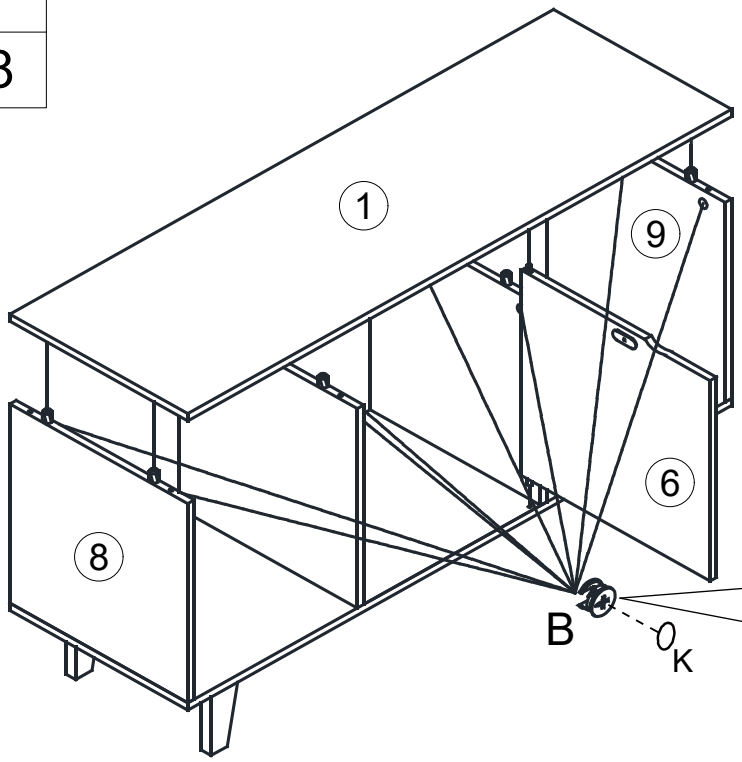

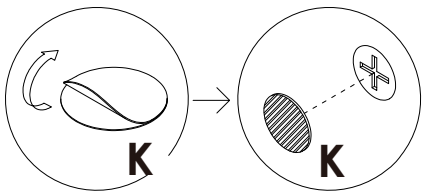

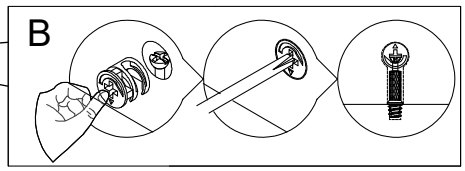

7

Ex4

Jx4

